

BELKIN®

EN

 
User Manual
SportCommand™ for iPod

Introduction

Congratulations and thank you for purchasing Belkin's SportCommand. Ideal for use during outdoor sports, this flexible armband-remote uses a touch-sensitive ElekTex® design to keep your iPod functional, dry, and secure—even during strenuous activity. SportCommand uses wireless radio-frequency (RF) technology to work at a distance of up to 50 feet. Please review this User Manual carefully so that you can be sure to get the most from your SportCommand.

Package Includes

SportCommand Receiver for iPod
SportCommand Remote Transmitter
Battery (model CR2032)
Armband
Armband Extension
Carabiner Clip

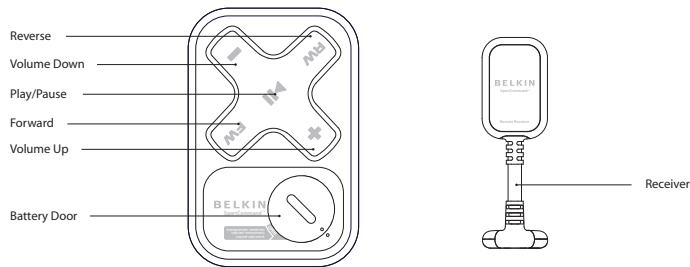

Introduction | 04

Setup Instructions

STEP 1 - SportCommand Receiver Setup

Power on your iPod. Then, plug the SportCommand Receiver into the bottom of the iPod (Fig. 1). The Receiver powers on automatically. Once the unit is on, we recommend engaging the hold switch on the iPod to prevent accidental button presses.

Note: The SportCommand Receiver can be used whether or not you use an iPod case.

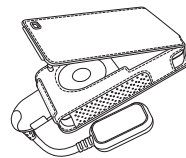 


Fig. 1

STEP 2 - SportCommand Remote Setup

1. Turn your Remote with the buttons facing up. Using a coin or something similar, turn the battery door counterclockwise and gently remove from the Remote (Fig. 2).
2. Insert the battery with the (+) side facing up (Fig. 3) and gently screw the battery door back into place. There are graphics on the Remote that indicate when the battery door is in the locked position.
3. Now press any of the Remote's buttons for the SportCommand Remote and Receiver to pair up. The green light on the Remote will blink when the first button-press command from the Remote reaches the Receiver correctly.



Fig. 2



Fig. 3

Setup Instructions | 05

Operating Instructions

Connect any pair of headphones or speakers to the iPod via the 3.5mm headphone port. Place the iPod and Receiver into your pocket or backpack, using a case for extra protection.

You can also keep your iPod stationary with a stereo or boom box and remotely control up to 50 feet. Simply connect a 3.5mm audio cable from the iPod to the line-in port on a stereo receiver or speakers.

Attach the Remote to the VELCRO® patch on the armband with the control panel facing up (Fig. 4). Place the armband around your arm. Use the included extension to improve your fit, if necessary (Fig. 5).

If you prefer to wear the remote on your belt, backpack, or attached to another object, use the included carabiner clip. Simply guide it through the loop on the back of the Remote (Fig. 6).

You can now use your SportCommand Remote to control the iPod device's play/pause, skip-forward, skip-backward, and volume up/down functions while your iPod stays protected at all times. We recommend engaging the hold switch on the iPod to avoid accidentally initiating the iPod controls.

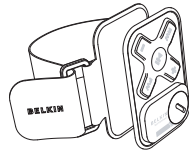 


Fig. 4

 


Fig. 5



Fig. 6

Operating Instructions

Automatic Sleep Mode

If there is no key press for 30 seconds, the Transmitter will automatically go into sleep mode. The Transmitter will wake up with the next key press but it will not transmit the signal to the Receiver. The Transmitter will function for the subsequent key press.

Note: Shuffle and repeat controls are not compatible with iPod 3G models (10GB, 15GB, 20GB, 30GB, 40GB). When used with the iPod with color display, SportCommand lets you scroll through your slideshows or presentations—wirelessly.

Water-Resistant Design

The SportCommand Remote features a water-resistant, hand-washable design. Water beads off the surface of the Remote and cannot damage its functionality. However, the Remote is not submersible.

Avoid using it during water-submersion activities such as swimming, surfing and bathing. The Remote can be cleaned by hand with a little soap and water.

EN

LED Chart

Every time you push a button on the Remote, the green lights on the Remote will blink, indicating that the signal has been received correctly. Shield the Remote from direct sunlight to improve legibility of the LED.

The Remote's battery level is automatically checked after every button press. If the battery level is low, the Remote's red light blinks once on each button press. The low battery should be replaced soon. The SportCommand will continue to function normally until the battery is exhausted.

Troubleshooting

Remote is not powering on or acknowledging a button press.

Ensure that the Remote battery is inserted correctly, with the (+) facing up, and the battery door is turned and locked into position.

After connecting the Receiver and Remote, there is no sound.

- Select a song on the iPod and press "PLAY".
- Make sure the headphones are correctly plugged into the iPod.
- Make sure the iPod is powered on.
- Make sure the Receiver is securely attached to the bottom of the iPod.
- Repeat STEP 1 and STEP 2 of the setup section.

Specifications

Operating Range: Up to 50 ft.

Transmission Method: Radio frequency

Frequency: 433MHz

Remote Battery: CR2032 3V

Remote Dimensions: 3.9 (H) x 2.7 (W) x 0.5 (D) in.

Remote Weight (including battery): 0.8oz.

Receiver Dimensions: 3.93 (L) x 0.89 (W) x 0.4 (D) in.

Receiver Weight: 0.5oz.

Armband Length: 14 in.

Armband-Extension Length: 9.86 in.

Environmental Specifications

Operating Temperature: -10° C ~ 40° C

Storage Temperature: -10° C ~ 50° C

Free Tech Support*

You can find additional support information on our website www.belkin.com through the tech-support area. If you want to contact technical support by phone, please call the number you need from the list below*.

*Local rates apply

Country	Number	Internet address
AUSTRIA	08 - 20 20 07 66	http://www.belkin.com/uk
BELGIUM	07 07 00 073	http://www.belkin.com/nl
CZECH REPUBLIC	23 900 04 06	http://www.belkin.com/uk
DENMARK	701 22 403	http://www.belkin.com/uk
FINLAND	00800 - 22 35 54 60	http://www.belkin.com/uk
FRANCE	08 - 25 54 00 26	http://www.belkin.com/fr
GERMANY	0180 - 500 57 09	http://www.belkin.com/de
GREECE	00800 - 44 14 23 90	http://www.belkin.com/uk
HUNGARY	06 - 17 77 49 06	http://www.belkin.com/uk
ICELAND	800 8534	http://www.belkin.com/uk
IRELAND	0818 55 50 06	http://www.belkin.com/uk
ITALY	02 - 69 43 02 51	http://www.belkin.com/it/support/tech
LUXEMBOURG	34 20 80 8560	http://www.belkin.com/uk
NETHERLANDS	0900 - 040 07 90 €0.10 per minute	http://www.belkin.com/nl
NORWAY	815 00 287	http://www.belkin.com/uk
POLAND	00800 - 441 17 37	http://www.belkin.com/uk
PORTUGAL	707 200 676	http://www.belkin.com/uk
RUSSIA	495 580 9541	http://www.belkin.com/uk
SOUTH AFRICA	0800 - 99 15 21	http://www.belkin.com/uk
SPAIN	902 - 02 43 66	http://www.belkin.com/es/support/tech
SWEDEN	07 - 71 40 04 53	http://www.belkin.com/se/support/tech
SWITZERLAND	08 - 48 00 02 19	http://www.belkin.com/uk
UNITED KINGDOM	0845 - 607 77 87	http://www.belkin.com/uk
OTHER COUNTRIES	+44 - 1933 35 20 00	

EN

Information

European Standards Compliance Statement

This product complies with the following standards: EN 60065, EN 300 320 and EN 301 489. For the full Declaration of Conformity please follow the following link: www.belkin.com/doc

This product complies to the WEEE directive. For recycling information please follow the following link: www.belkin.com/environmental



Warranty

Belkin Corporation Limited 3-Year Product Warranty

What this warranty covers.

Belkin Corporation warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Belkin Corporation warrants the Belkin product for three years.

What will we do to correct problems?

Product Warranty.

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

EN

What is not covered by this warranty?

All above warranties are null and void if the Belkin product is not provided to Belkin Corporation for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin Corporation determines that the Belkin product has been improperly installed, altered in any way, or tampered with. The Belkin Product Warranty does not protect against acts of God (other than lightning) such as flood, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

Warranty

How to get service.

To get service for your Belkin product you must take the following steps:

1. Contact Belkin Customer Service (see details on page 9), within 15 days of the Occurrence. Be prepared to provide the following information:
 - a. The part number of the Belkin product.
 - b. Where you purchased the product.
 - c. When you purchased the product.
 - d. Copy of original receipt.
2. Your Belkin Customer Service Representative will then instruct you on how to forward your receipt and Belkin product and how to proceed with your claim.

Belkin Corporation reserves the right to review the damaged Belkin product. All costs of shipping the Belkin product to Belkin Corporation for inspection shall be borne solely by the purchaser. If Belkin determines, in its sole discretion, that it is impractical to ship the damaged equipment to Belkin Corporation, Belkin may designate, in its sole discretion, an equipment repair facility to inspect and estimate the cost to repair such equipment. The cost, if any, of shipping the equipment to and from such repair facility and of such estimate shall be borne solely by the purchaser. Damaged equipment must remain available for inspection until the claim is finalized. Whenever claims are settled, Belkin Corporation reserves the right to be subrogated under any existing insurance policies the purchaser may have.

Warranty

How state law relates to the warranty.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN CORPORATION, THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BELKIN CORPORATION BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.

BELKIN®

www.belkin.com

Belkin Ltd.
Express Business Park
Shipton Way, Rushden
NN10 6GL, United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin B.V.
Boeing Avenue 333
1119 PH Schiphol-Rijk, Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

Belkin GmbH
Hanebergstrasse 2
80637 Munich, Germany
+49 (0) 89 143405 0
+49 (0) 89 143405 100 fax

Belkin SAS
130 rue de Silly
92100 Boulogne-Billancourt, France
+33 (0) 1 41 03 14 40
+33 (0) 1 41 31 01 72 fax

Belkin Iberia
Avda. Cerro del Aguila 3
28700 San Sebastián de los Reyes, Spain
+34 91 625 80 00
+34 902 02 00 34 fax

Belkin Sweden
Knarrarnäsgatan 7
164 40 Kista, Sweden
+46 (0) 8 5229 1870
+46 (0) 8 5229 1874 fax

© 2006 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. Apple and iPod are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

F8Z076ea

P75186ea